

## INSTALLATION OF THE TANK

Before the installation of the tank, the owner must ensure that the tank is installed in a safe location and that the tank is properly supported. The tank must be installed in a location that is accessible for inspection and maintenance. The tank must be installed in a location that is protected from fire and other hazards.



After the tank is installed, the owner must ensure that the tank is properly supported and that the tank is protected from fire and other hazards. The tank must be installed in a location that is accessible for inspection and maintenance.



INSTALLATION NOW COMPLETE