

REPAIRING A BATTERY

1. Remove the battery cover by pulling the cover off the battery.



2. Check the electrolyte level in the cells and add distilled water if needed.



3. Reconnect the battery terminals. Tighten the terminals and check the battery voltage.



REPAIRING A BATTERY

