



4. The fourth step is to check the spark plugs. Spark plugs are responsible for igniting the fuel mixture in the engine's cylinders. If the spark plugs are worn or fouled, the engine will run poorly.

Spark plugs should be replaced every 30,000 miles or every 3 years, whichever comes first. If the spark plugs are fouled, they should be cleaned or replaced.

5. The fifth step is to check the timing belt. The timing belt is responsible for synchronizing the engine's valves and pistons. If the timing belt is worn or broken, the engine will run poorly. The timing belt should be replaced every 60,000 miles or every 5 years, whichever comes first.