

Step 1
Remove the front panel of the printer by pulling it out from the front of the printer.



Step 2
Remove the front panel of the printer by pulling it out from the front of the printer.

