



# 2022+ TOYOTA TUNDRA


# Any damaged or missing parts?

Parts will be shipped to you directly.


Call 818-365-9000 Mon - Fri 8:30 am - 7:00 pm EST or email support@bakindustries.com

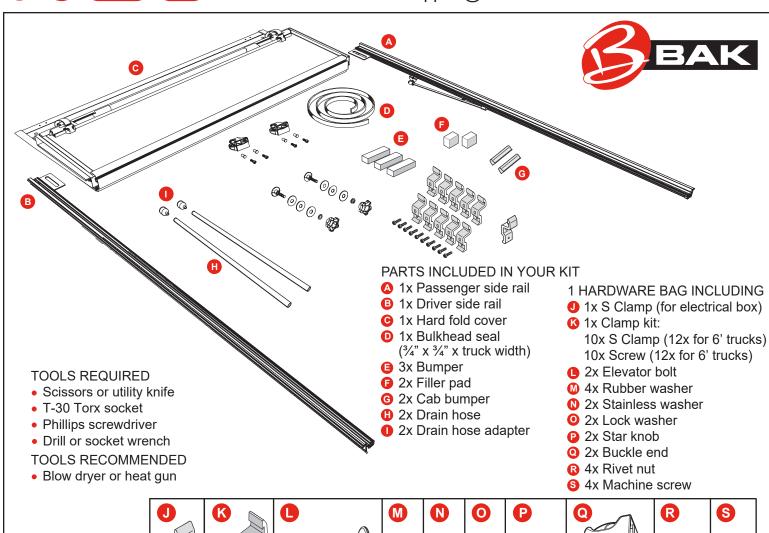


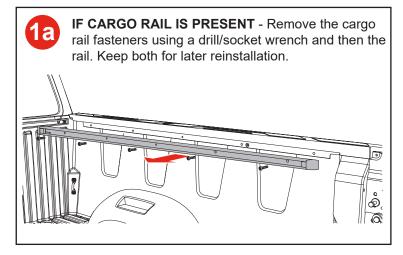


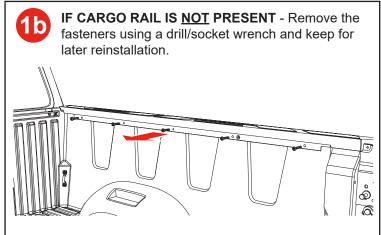



ammmi))

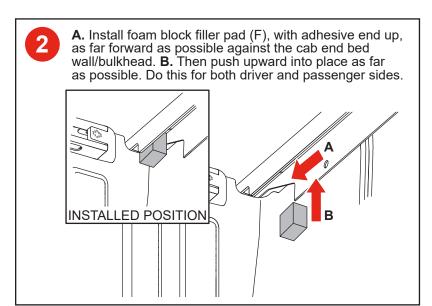


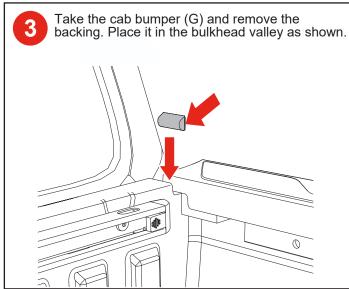


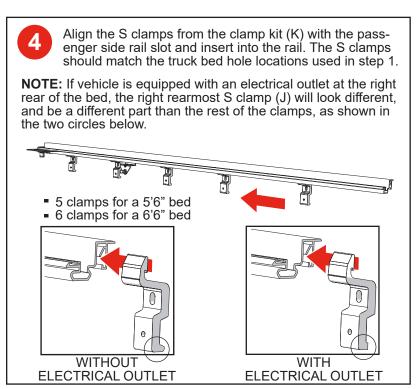


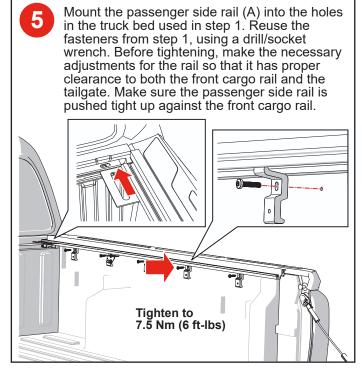


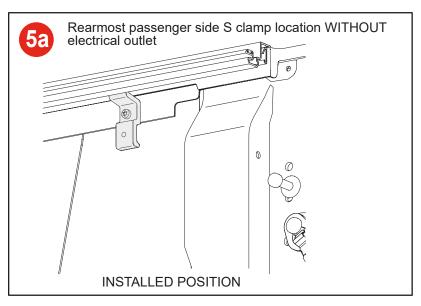


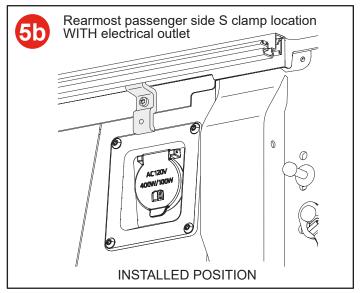


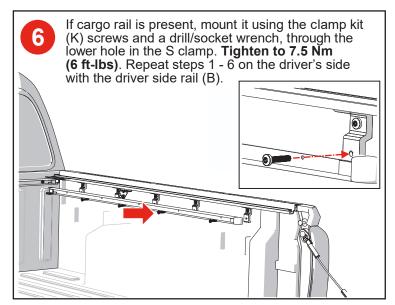


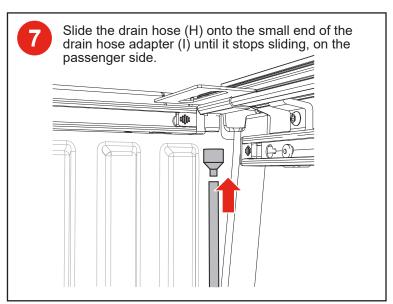


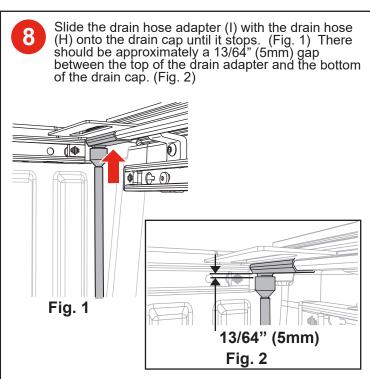

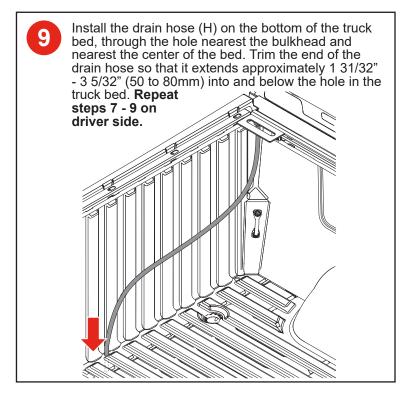


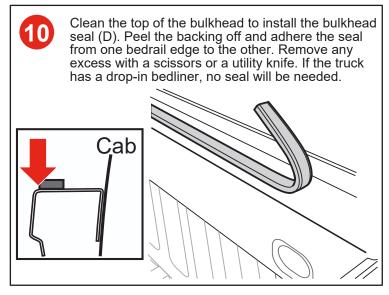


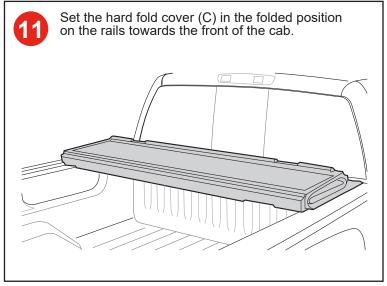

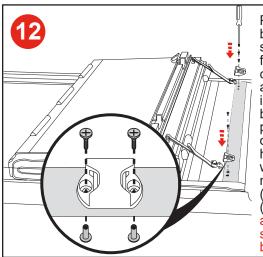


Position the buckle ends (Q) so the open side faces the bed cover panel. Use a screwdriver to install the two buckles into the pre-drilled holes on the front header panel with the provided machine screws (S) and rivet nuts (R). DO NOT use à screw gun, securely tighten by hand only.

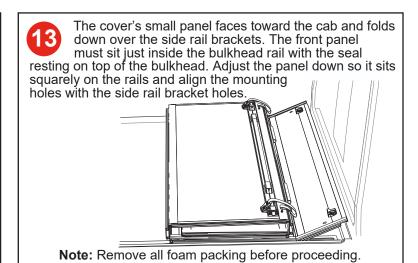

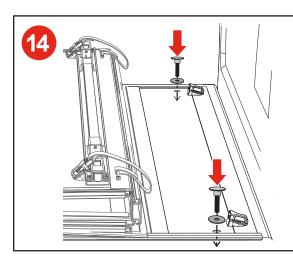



Insert one elevator bolt (L) and rubber washer (M) through the top front panel and down through the slotted rail bracket on each side.

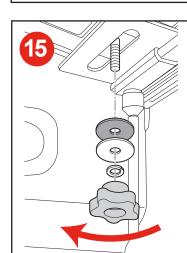



Assemble the washers from underneath and loosely tighten the star knob (P). Do not overtighten.


Install the washers onto the threaded shaft of the elevator bolt (L), starting with a rubber washer (M) first, then the stainless washer (N), then the lock washer (O), and finally the star knob (P) as shown to the left. Do this on each side.

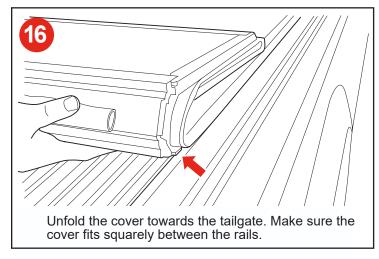


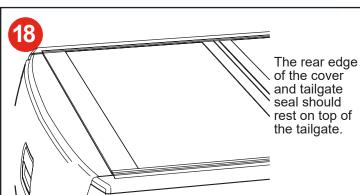


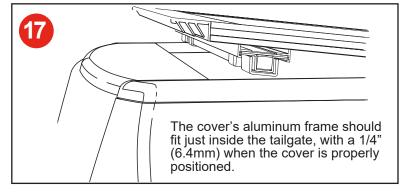

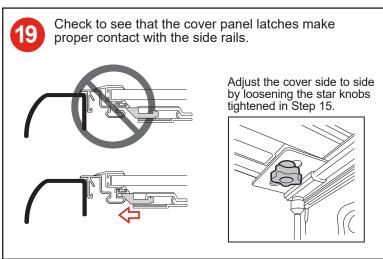

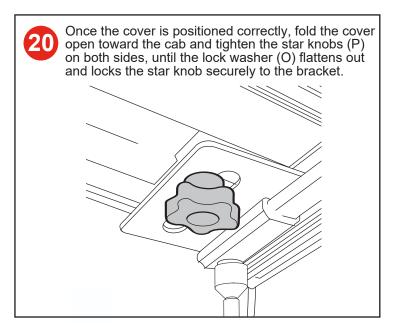

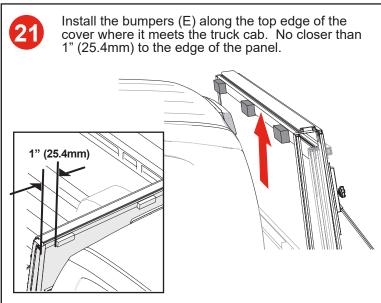

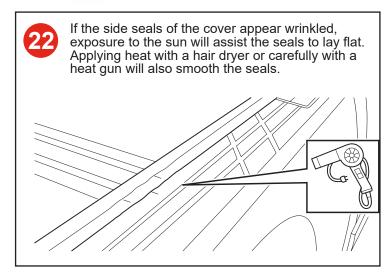

# **IMPORTANT:** Safe operation and use

FLIPPED UP:A

## **Tonneau Cover Positions While Operating Vehicle**


Prior to vehicle operation, the truck bed cover MUST be properly secured. It is recommended to keep the truck bed cover in the closed position and secured when not in use.

## **CLOSED POSITION**

All panels must be closed and FULLY LATCHED to tonneau side rail. All panels must be flat and latches engaged.

### **FOLDED UP POSITION**

To drive with your cover in the folded up position, simply make use of the tie down straps and buckles provided with your cover. Ensure BOTH buckle clips are fully inserted into the buckle ends located on the front header panel of the cover and adjust the straps to ensure the cover is secure during vehicle operation. **IMPORTANT NOTICE:** The clips should be secured in the storage position buckle ends located on the cover latch housing when not in use.

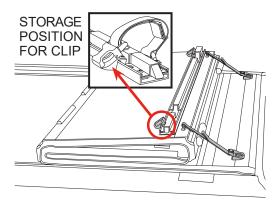


FOLDED UP POSITION

### **FLIPPED UP POSITION**

A) Fold the cover open and lift it until it's vertical or past 90 degrees towards your truck cab. Then release the prop rod that is attached to your rail. Fold the prop rod over and position it firmly against the vertical plate on the underside of your cover. Then slide the prop rod locks downwards and tighten the knobs to lock into position. Do this on both sides of the cover.

B) Your cover should be firmly in position with little to no movement once the prop rods are locked.

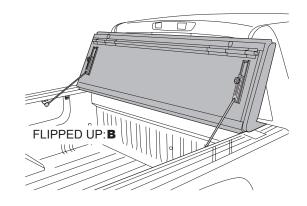


# **Tail Panel Operation**

### TO CLOSE THE TAILGATE PANEL

The tailgate can be closed with the bed cover either up or down for universal operation.

## TO OPEN THE TAILGATE PANEL

- Open the tailgate and reach under the panel for the cable at the ends of the panel housing.
- Pull down on either cable to release both rear latches with one hand while lifting the panel with the other hand.

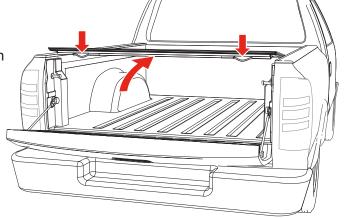

# DO NOT ATTEMPT TO DRIVE WITH THE TAIL PANEL IN THE PARTIALLY OPEN POSITION!

# **Additional Important Operating Tips:**

- The bed cover MUST be free of foreign material including snow and ice before opening panels.
- Do NOT tow your vehicle from the rear with the bed cover on your truck.
- Do NOT operate vehicle with objects on top of cover.

# FAILURE TO FOLLOW THESE CAUTIONS MAY RESULT IN SEVERE DAMAGE AND WILL VOID YOUR WARRANTY!



Remove any snow or foreign matter before folding cover.



Do NOT tow your vehicle from the rear with this cover on your truck.

# Warranty

BAK® Industries ("BAK") warrants your BAKFlip Hard Folding Cover to be structurally free from defects in material and workmanship for the period as outlined in the table below from the retail date of purchase. Warranty registration must be on file and/or proof of original purchase (detailed and dated receipt) required for warranty service. Warranty is non-transferable and applies to the original purchaser of the BAK product only.

PRODUCT	WARRANTY PERIOD	REGISTER YOUR	IN MERCANTER
BAKFlip G2	3 Year Limited Warranty	WARRANTY	
BAKFlip F1	5 Year Limited Warranty	NOW AT	
BAKFlip FiberMax	3 Year Limited Warranty		
BAKFlip MX4	5 Year Limited Warranty	BAKINDUSTRIES.COM	同るのの記録記

BAK reserves the right to determine whether a product needs to be repaired or replaced. No labor or service allowance is given or implied. The warranty will be void if the product has been damaged by accident, unreasonable use, neglect, improper service/installation/removal, modifications, acts of God or normal wear and tear or other causes not arising out of defective materials or workmanship. BAK assumes no liability for injury, loss, incidental or consequential damages. BAK reserves the right to substitute an entire replacement system or provide other remedies than those listed in this warranty for discontinued products or other reasons. Shipping charges will apply for any repair or replacement.

BAK is committed to providing you with our best service at all times. Please feel free to contact us should you require any assistance with your BAK product.

## CARE AND MAINTENANCE

BAKFlip tonneaus are made from durable materials and require simple care to ensure a long life of performing well and looking great.

### Cleaning the Top (Washing)

Standard automotive soap and water with a soft sponge or cloth is recommended for cleaning. Shammy dry to keep the finish polished and brilliant. Wax is NOT recommended as it tends to fill in cracks and crevices, which may affect the textured panel finish. Do NOT use any harsh cleaners or abrasives.

#### Maintenance

It is recommended that you periodically check your cover is securely attached to your truck bed. Inspect the clamps and front mounting bolts to ensure they were properly installed and have not come loose or knocked out of adjustment during operation. Covers that are used with high frequency or that are subject to the vibrations and impact from rough roadways can cause the cover to require adjustment.

#### **Lubricating the Latches**

It is recommended that you periodically inspect and service the latches on each panel. Clean away any excess dirt or grime and lubricate with silicone spray. Ensure the latches move freely in and out to properly engage the side rail and provide proper performance with optimum security. Be careful not to over spray the cover. Wipe away any excess around the latch location.