

# **HUSKY** **WeatherBEATER™** **Custom Vehicle Floor Protection**


## CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater™ Floor Liner from Winfield Consumer Products. Your new third seat liner is custom molded to fit your Suburban/Yukon XL/Escalade ESV with 2<sup>nd</sup> row bucket seats. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Using Armor All®, Son-of-a-Gun® or like items is discouraged as these products make the liner slick.


### **INSTALLATION INSTRUCTIONS FOR YOUR ESCALADE ESV, SUBURBAN OR YUKON XL 3RD SEAT LINER (WITH 2<sup>ND</sup> ROW BUCKET SEATS)**

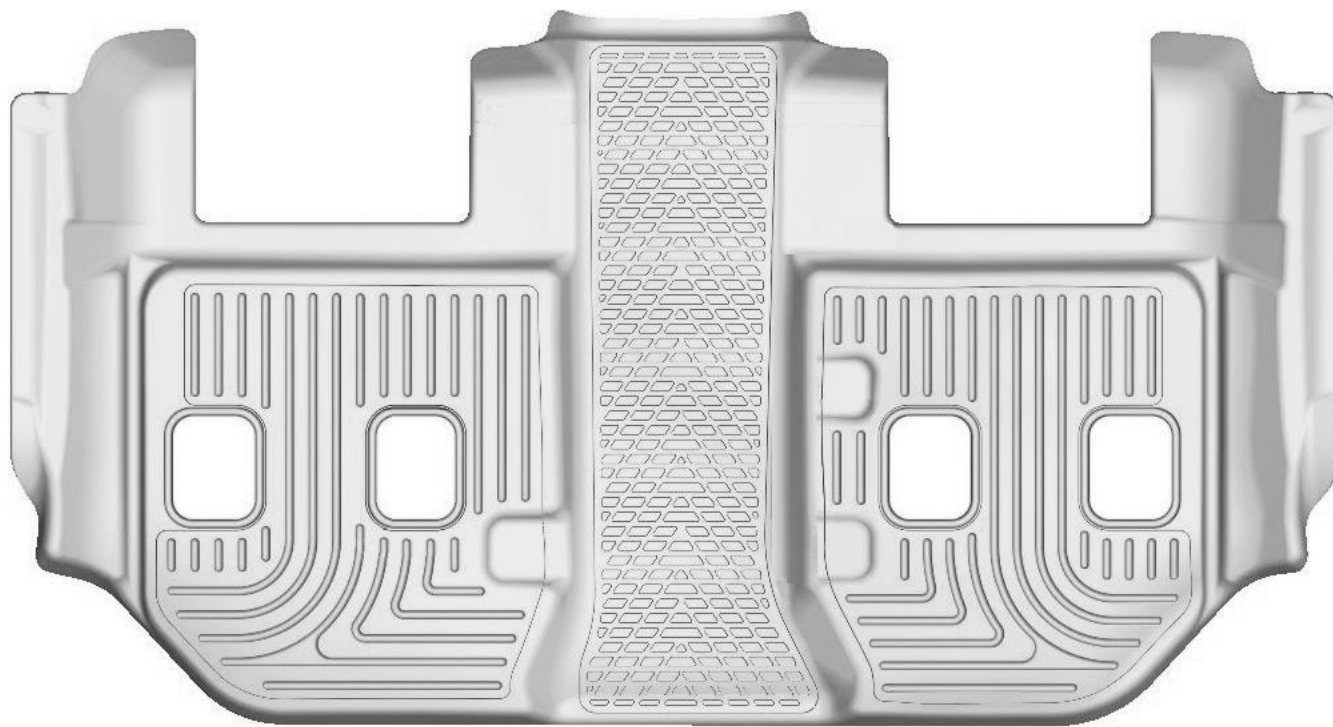

BEFORE ATTEMPTING TO INSTALL YOUR LINER, FIRST FLIP/FOLD YOUR SECOND ROW BUCKET SEATS FORWARD TO EXPOSE THE 3<sup>RD</sup> ROW FLOOR PAN. WITH THIS DONE YOU CAN POSITION THE LINER IN THE FLOOR ORIENTED AS SHOWN ABOVE. THE “TONGUE” AREA PROVIDES COVERAGE BETWEEN THE 2<sup>ND</sup> ROW BUCKET SEATS AND TUCKS UNDER THE REAR EDGE OF YOUR 2<sup>ND</sup> SEAT LINER. THE TWO DOOR EDGE TONGUE SECTIONS TUCK UNDER THE 2<sup>ND</sup> SEAT LINER AS WELL.

NOTE THAT THE FOUR TRIMMED AREAS IN THE LINER ALLOW THE SECOND ROW SEATS TO FASTEN THROUGH THE LINER. IF YOUR LINER DOES NOT HAVE THESE FOUR AREAS TRIMMED, DO NOT INSTALL THE LINER AS THE 2<sup>ND</sup> ROW SEATS WILL NOT FASTEN SECURELY IN PLACE. INSTEAD, PLEASE CALL HUSKY LINERS AT 800-344-8759 TO GET THE CORRECT LINER.

**PART #1928 SHOWN INSTALLED—NOTE 2<sup>ND</sup> ROW SEATS ARE FLIPPED/FOLDED FORWARD**

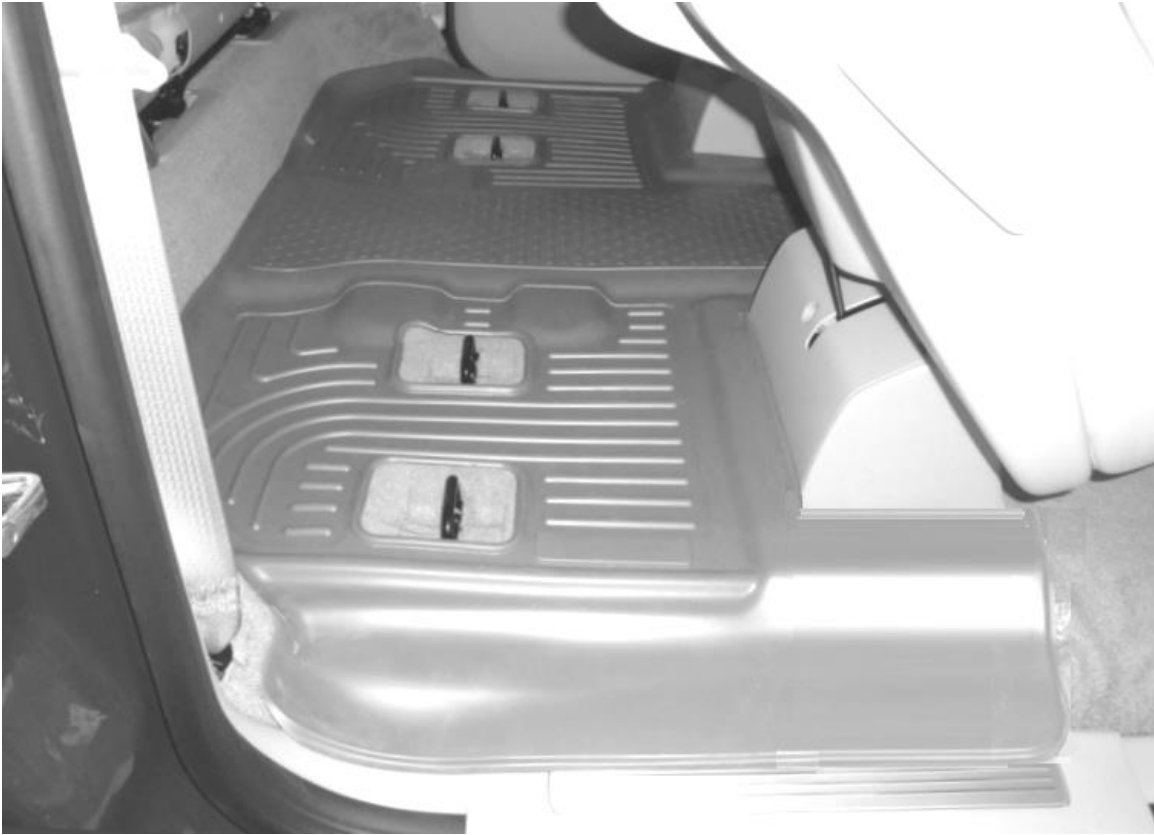

**PART #1928 SHOWN INSTALLED—NOTE SEAT ATTACHES TO FLOOR THROUGH LINER**

