

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Use of Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA TACOMA TRUCK FRONT FLOOR LINERS

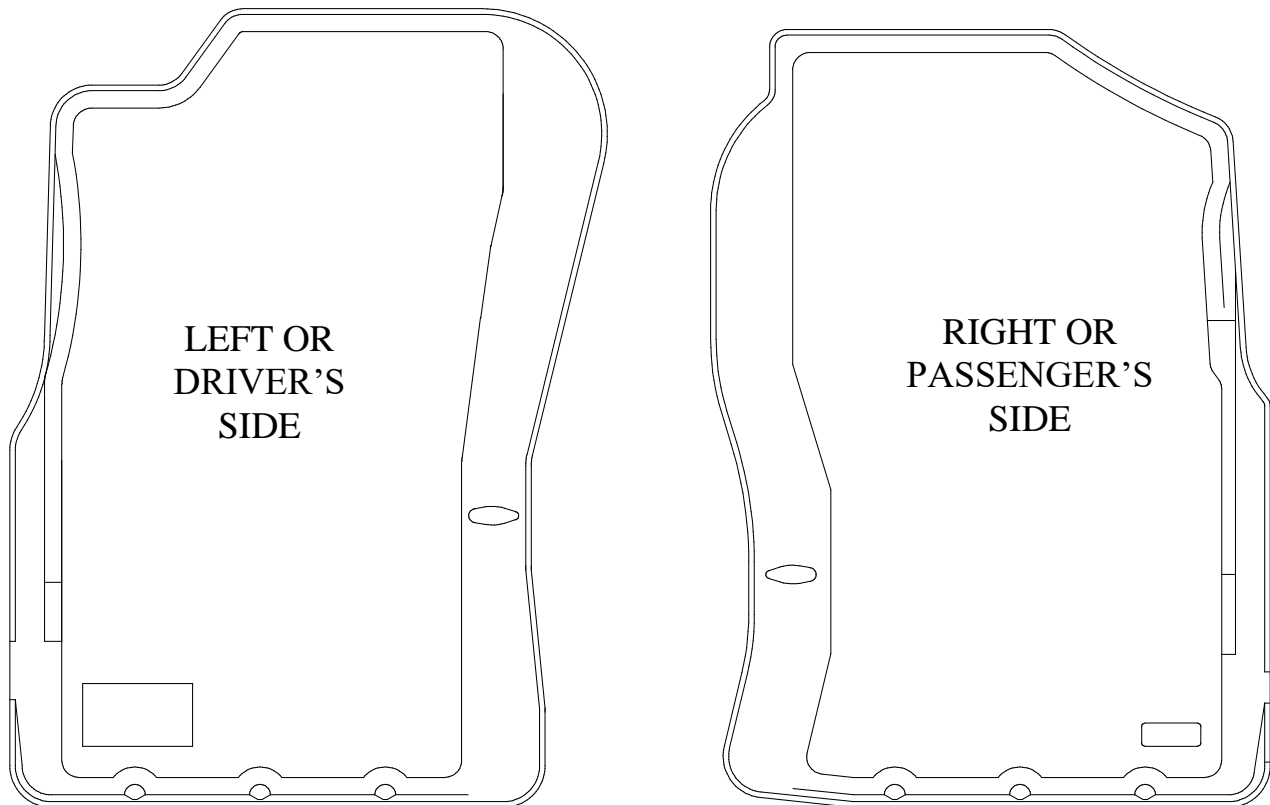

TO INSURE PROPER FIT OF YOUR DRIVER'S SIDE LINER, PLEASE REMOVE YOUR FACTORY MAT RETAINING HOOK. THIS IS EASILY DONE BY PULLING UP OF THE END OF HOOK. THIS WILL ALLOW THE HOOK TO "POP" OUT OF THE GROMMET IT IS SEATED IN. THE RETAINER CAN BE STORED IN YOUR GLOVE BOX FOR REPLACEMENT AT A LATER DATE.