



## WEATHERBEATER™ FLOOR LINERS

PT #9411


### CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater® Floor Liner from Husky Liners. Your new front floor liners are custom molded to fit your Ram 2500/3500 Crew Cab truck. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

### INSTALLATION INSTRUCTIONS FOR YOUR RAM 2500/3500 CREW CAB & MEGA CAB TRUCK FRONT FLOOR LINERS

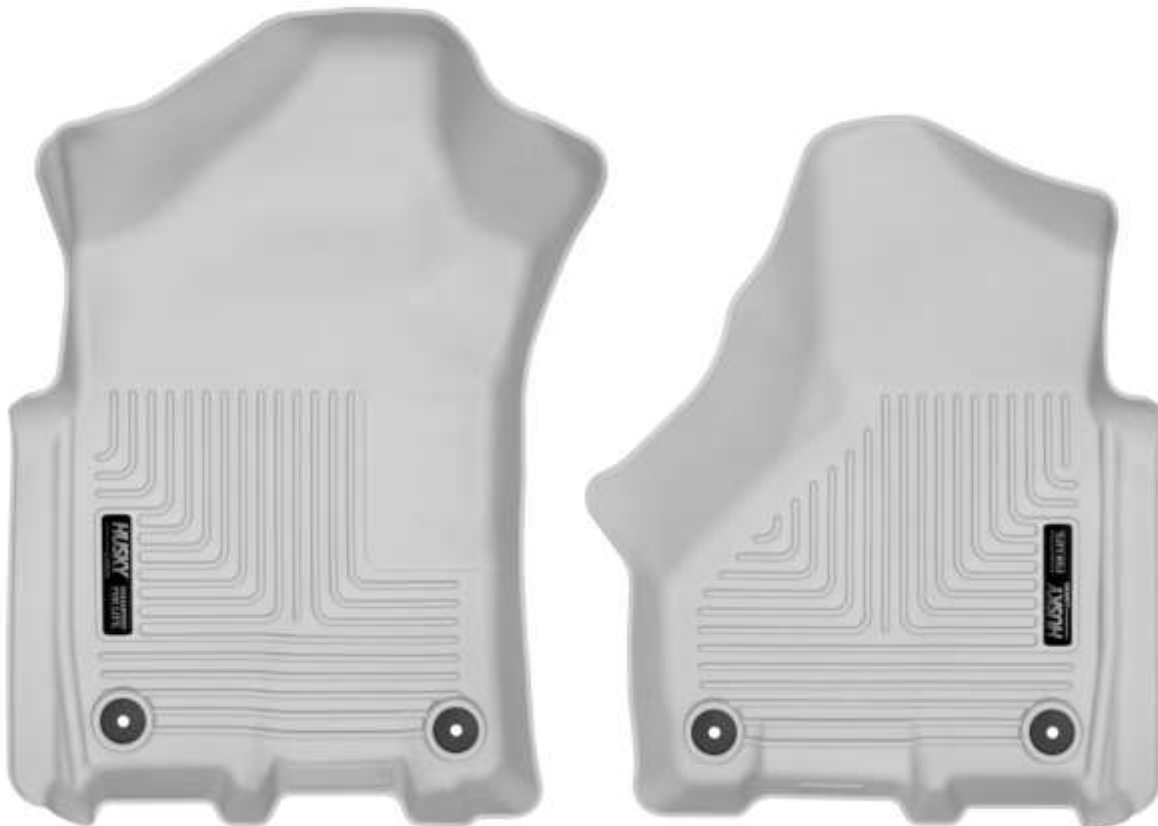

LEFT OR DRIVER'S SIDE

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR NEW FRONT LINERS, MOVE BOTH FRONT ROW SEATS TO THEIR MOST REARWARD POSITION. WITH THIS DONE, INSTALL THE LINERS AS SHOWN ABOVE. THE LINERS SNAP OVER / ATTACH TO THE FACTORY MAT RETAINERS. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE SEATS AS DESIRED.



## WEATHERBEATER™ FLOOR LINERS

PT #9411

### CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater® Floor Liner from Husky Liners. Your new rear floor liner is custom molded to fit your Ram 2500/3500 Crew Cab truck. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

### INSTALLATION INSTRUCTIONS FOR YOUR RAM 2500/3500 CREW CAB TRUCK 2ND SEAT FLOOR LINER

FRONT OF  
VEHICLE



TO EASE INSTALLATION OF YOUR RAM CREW CAB SECOND SEAT LINER, MOVE BOTH FRONT ROW SEATS TO THEIR MOST FORWARD POSITION. WITH THIS DONE, INSTALL YOUR LINER, POSITIONING IT AS SHOWN IN THE IMAGE ABOVE. ONCE THE LINER IS INSTALLED, REPOSITION THE FRONT SEATS AS DESIRED.

IF YOUR RAM IS EQUIPPED WITH FRONT ROW BENCH SEATS, THE LINER WILL TUCK UNDER THE AIR VENTS THAT EXTEND OUT ONTO THE CENTER HUMP AREA IN THE BACK SEAT FLOOR. PLEASE SEE PHOTOS ON THE NEXT PAGE.



## WEATHERBEATER™ FLOOR LINERS

PT #9411



**PHOTO OF LINER TUCKED UNDER THE AIR VENT  
ASSEMBLY IN THE 2<sup>ND</sup> SEAT FLOOR PAN.**