


HUSKY WeatherBEATER™ Custom Vehicle Floor Protection

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater™ Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Subaru Impreza and Crosstrek. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR SUBARU IMPREZA & CROSSTREK FRONT FLOOR LINERS

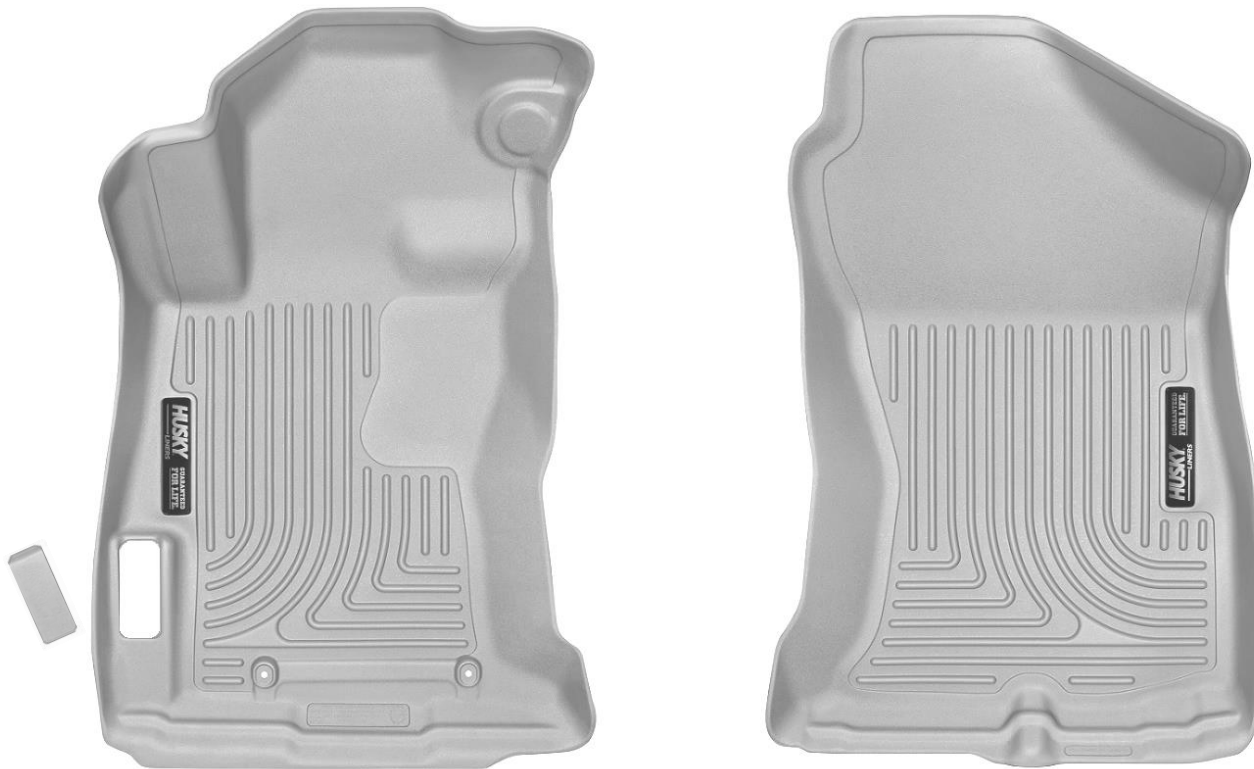

LEFT OR DRIVER'S SIDE

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR FRONT FLOOR LINERS, MOVE THE FRONT SEATS TO THEIR REAR MOST POSITION. NEXT, REMOVE ANY EXISTING FLOOR MATS FROM THE VEHICLE. FINALLY, INSTALL YOUR HUSKY LINERS POSITIONING THEM AS SHOWN ABOVE. TAKE CARE TO MAKE SURE THE LINERS ARE PUSHED-DOWN OVER THE MAT RETAINING POSTS IN THE DRIVER'S SIDE FLOOR. NOTE THAT THE LINER DOES HAVE A TRIM AREA LOCATED DIRECTLY ABOVE THE FUEL DOOR RELEASE AREA. THE LOWERED GROOVE GUIDES THE TRIM TO REMOVE THIS COVERAGE (SEE IMAGE ABOVE). A UTILITY KNIFE OR SIMILAR WORKS WELL FOR TRIMMING. YOU CAN ALSO SIMPLY LIFT THE LINER TO ACCESS

THE RELEASE AS WELL.


HUSKY **Weather** **BEATER**[™] **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater[™] Floor Liner from Winfield Consumer Products. Your new 2nd seat liner is custom molded to fit your Subaru Impreza and Crosstrek. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR SUBARU IMPREZA & CROSSTREK

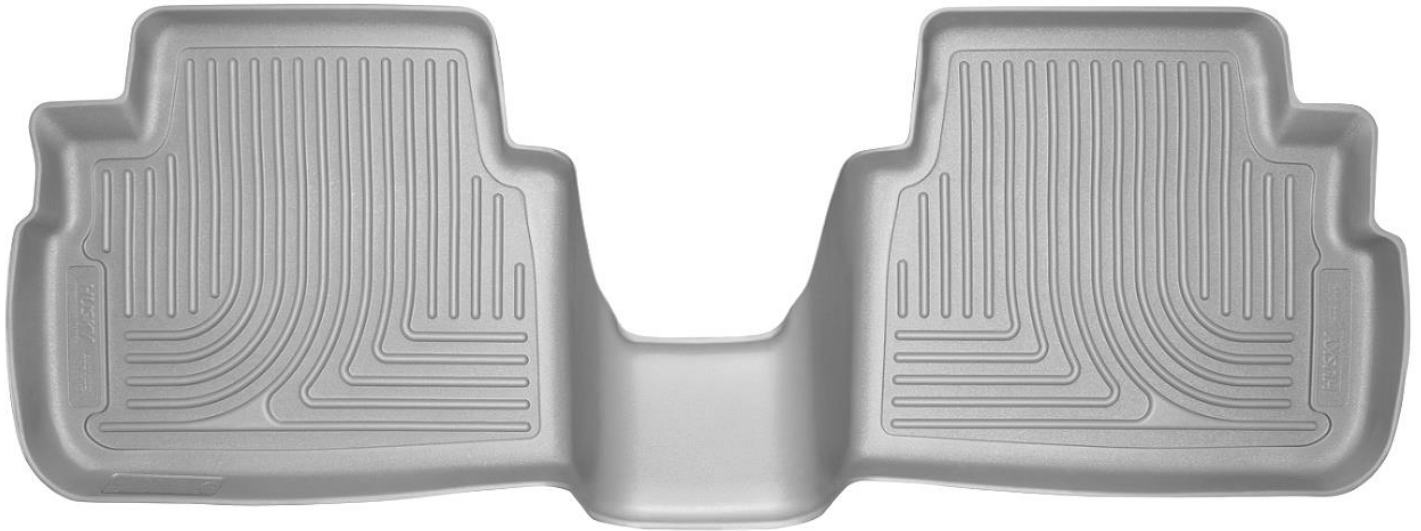

TO EASE INSTALLATION OF YOUR 2ND SEAT LINER, FIRST MOVE THE FRONT ROW SEATS TO THEIR MOST FORWARD POSITIONS. ONCE THE LINER IS INSTALLED, YOU CAN REPOSITION THE FRONT ROW SEATS AS DESIRED.