

ROUGH COUNTRY

SUSPENSION SYSTEMS®

2011– 2016 Ford Super Duty LED Fog Light Mount

Thank you for choosing Rough Country for all your suspension and lighting needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

KIT CONTENTS

- (2) 2+LED Lights
- (2) Light Brackets
- (4) Stainless Bolts
- (8) Flat Washers
- (4) Nylon Lock Nuts
- (2) Wiring Harness Adapters




TOOLS NEEDED

- 13mm Socket
- 8mm Wrench
- 8mm Socket
- Flat Screwdriver
- Pliers
- 1/8+Allen Wrench
- 3/8+Wrench

INSTALLATION INSTRUCTIONS

1. Remove (4) bumper brace bolts using a 13mm socket. **See Photo 1**
2. Unplug fog light and remove wire from factory fog light mount. **See Photo 2.**

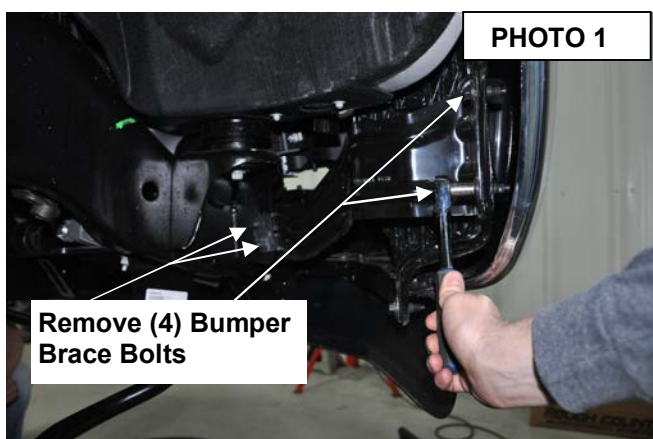

3. Using an 8mm wrench, remove the (3) bolts holding the factory fog light bracket in place. **See Photo 3.**
4. Using pliers or screwdriver, remove (4) keepers from trim ring studs. **See Photo 4.**



PHOTO 3

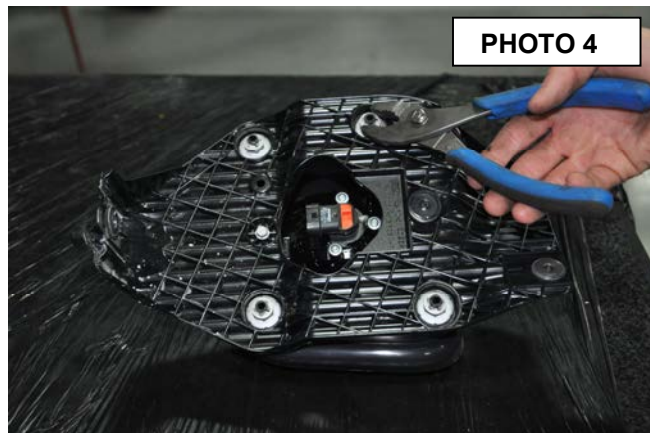


PHOTO 4

5. Using 13mm socket, remove (4) speed nuts from fog light trim ring. **See Photo 5.**
6. Separate trim ring from fog light mount. **See Photo 6.**



PHOTO 5



PHOTO 6

9. Using 8mm socket remove the fog light adjustment bolt from the mount and retain for reuse. **See Photo 7.**
10. Remove and retain spring (Photo 8), (2) push pins (Photo 9), and clip (Photo 10) for reuse.

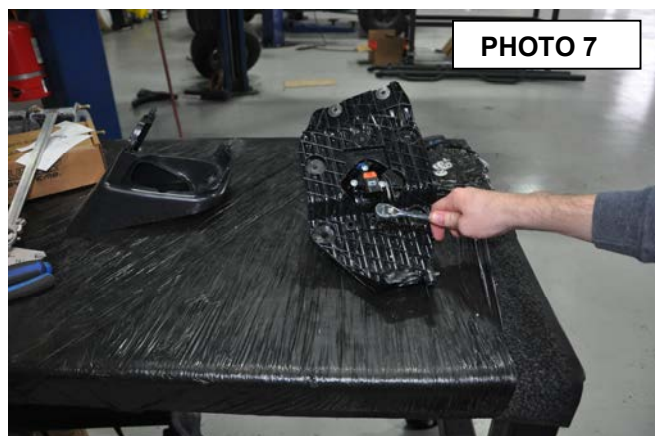


PHOTO 7



PHOTO 8



9. Using supplied Allen wrench, remove u-shaped bracket from 2+LED light. **See Photo 11.**
 10. Install new bracket in light and secure using hardware included with light. **See Photo 12.**



11. Set bottom tab of bracket parallel to light face, tighten with supplied Allen wrench. **See Photo 13.**
 12. Place clip onto lower tab of light bracket. **See Photo 14.**



13. Using supplied #10 bolts, nuts, and washers, attach light assembly to mounting bracket. Using 1/8+Allen and 3/8+ wrench snug bolts. **Do Not Over Tighten. See Photo 15.**
14. Place spring back in factory location under lower mounting tab. **See Photo 16.**

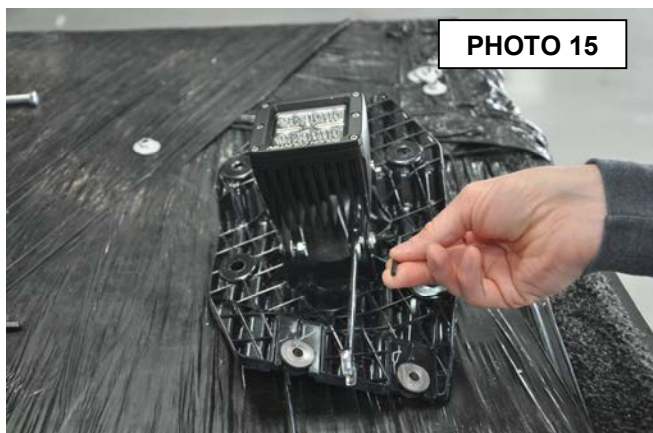


PHOTO 15



PHOTO 16

15. Using 8mm socket, reinstall the fog light adjustment bolt.
16. Attach trim ring on mounting plate and tighten speed nuts with a 13mm socket. **See Photo 17.**
17. Repeat process for opposite side and wire lights.
18. Reinstall bracket into bumper and bumper brace on both sides.



PHOTO 17

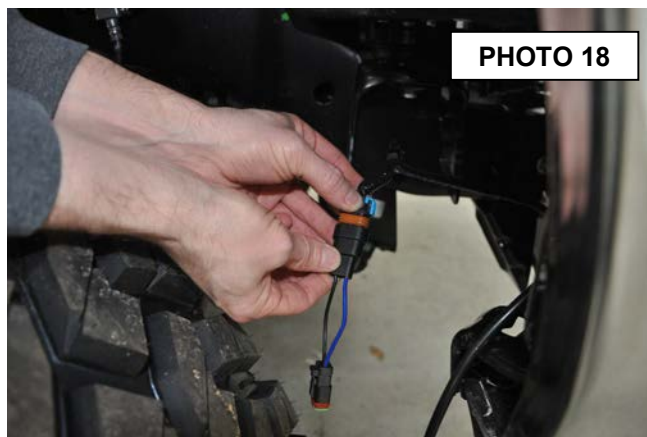


PHOTO 18

19. Plug supplied wiring adapter into factory harness, **See Photo 18.**
20. Plug Rough Country LED into adapter. **See Photo 19.**

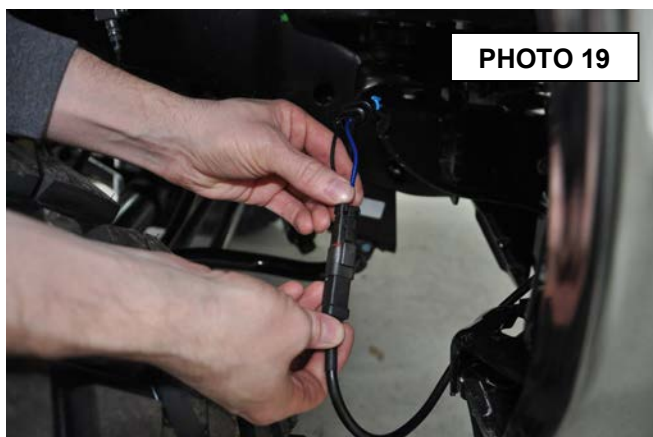


PHOTO 19



Thank You for choosing Rough Country for your off road needs!!!

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyer's responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.