



# **GATORBACK**

## **MUDFLAPS**


# **Universal Dually Mud Flap Mounting Diagram & Instructions**

## **GB1924/GB2124**

### **IMPORTANT:**

*The manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.*

### **TOOLS REQUIRED:**

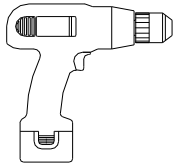


*Electric or Re-Chargeable  
1/2" or 3/8" Drill*



*3/8" Socket Driver*


### **FLAPS**

*(2) Universal Dually  
Mud Flaps*

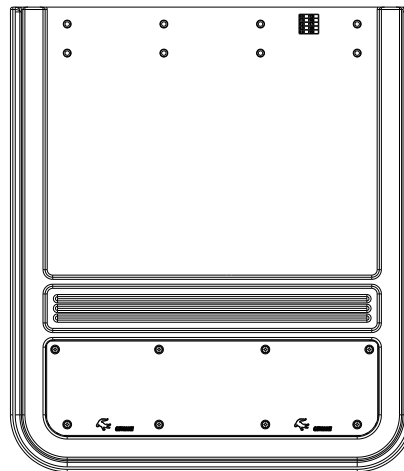


### **PARTS BAG #755134**

*(16) Tek Screw, SS  
Part #010011*

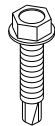

*(16) Flat Washer, SS  
Part #018068*

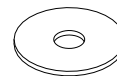

## INSTALLATION

Please note: There are several custom mud flap kit options available, as well as vehicle specific mounting brackets. These options are sold separately.

*For ease of installation, it is suggested that the wheel be removed.*

1. Before you install your Truck Hardware Mud Flap Set, see the diagram and parts list for all necessary parts. Start on the Driver's side.
3. Square the flap with the tire at the desired height while putting pressure on the flap against the wheel well. The Outside edge of the flap should be  $\frac{1}{2}$ " past the wheel well.
4. Fasten the flap using the supplied tek screws and flat washers. Note: This is a universal application, which requires drilling into the fender of the vehicle and should not be solely installed on the plastic dually tub. Some modifications may be required.
5. Repeat procedure for the passenger side. Ensure all fasteners are tight.

