

11475
05-10 DODGE
CHARGER SRT



11475
05-10 DODGE
CHARGER SRT

05-10 DODGE CHARGER SRT **Hood Scoop Trim**

TOOLS REQUIRED:

5/16" Socket & Ratchet
Plastic Pry Tool

PARTS LIST

(3) 1/2"x1/2" Flat Spacer
(3) 6/32 Nylon Lock Nuts
(1) Hood Scoop Trim

Step 1

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION. Open the hood and remove the fasteners holding the plastic cover from the hood. Next remove the fasteners holding the plastic cover behind the air intake and remove the cover.

Step 2

Slide your new Mesh Hood Vent Grill into place by sliding the studs through holes in the stock hood vent then from behind install (3) 1/2" x 1/2" flat spacers & 6-32 nylon lock nuts. Adjust your new Hood Vent Grill if needed and tighten the hardware.

Step 3

Re-install the hood vent plastic cover and the plastic hood cover. Installation complete.

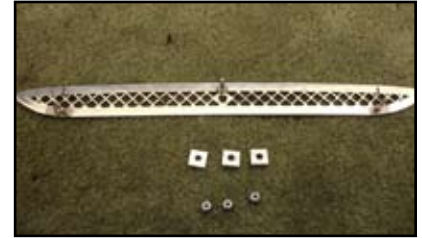


Fig 1



Fig 2

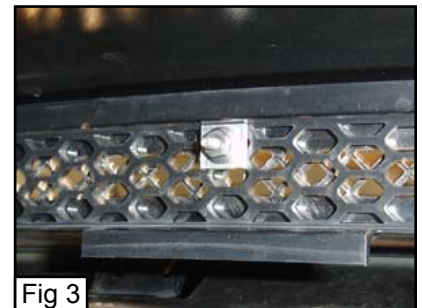


Fig 3