
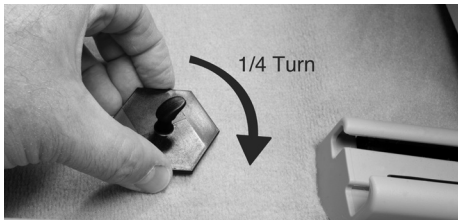


WeatherTech®



T-Bottom Retention Hook Installation Instructions

Follow installation instructions based on your WeatherTech® purchase

All-Weather Floor Mats

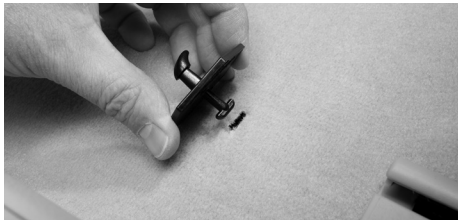

FloorLiner™

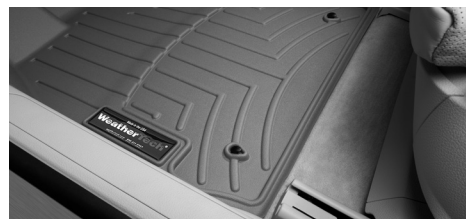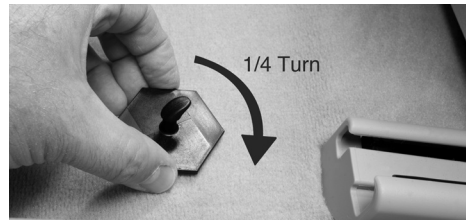

WeatherTech®

Auger Retention Hook Installation Instructions

Follow installation instructions based on your WeatherTech® purchase

All-Weather Floor Mats



FloorLiner™

